 


CIRA OFFICE MASSAGE CHAIR USER MANUAL

IR505

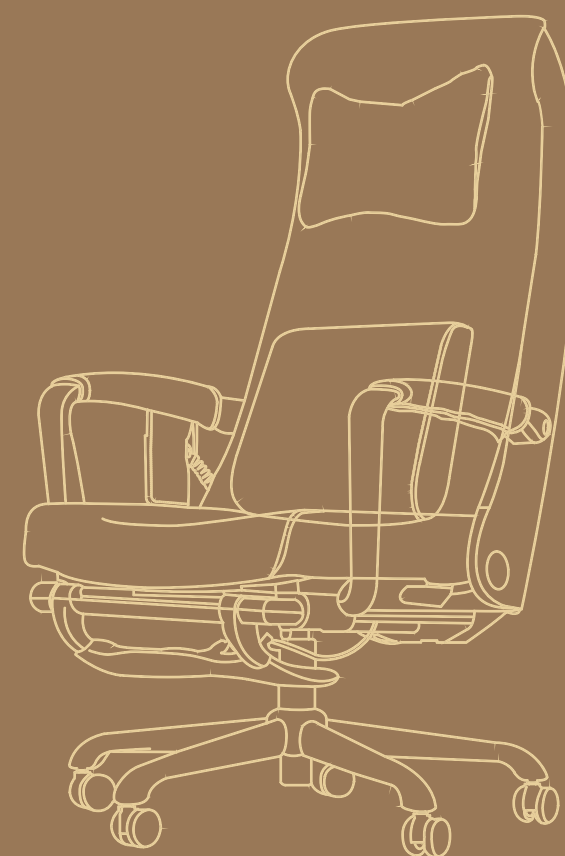

irelax

Safety Precautions

This product has a safety design, but the electrical product operation error may cause major accidents, please be sure to read the safety precautions before use, use the product correctly.

Safety symbols	
The safety warnings in this note are represented by the following three symbols.	
	Call caution ☎
	Express prohibited act
	Enforce behavior in accordance with instructions

⚠ Warning	
If an exception or failure occurs, please stop using it immediately. Continue to use may have fire or leakage,the consumers please do not disassemble and repair the product.	
 must observe	● Water or foreign matter entering the product ● The wires are damaged or disconnected ● The fall caused product damage If the above situation occurs, please operate the following methods. ①In the case of use, please immediately press the emergency stop button to stop using. ②Unplug the power cord from the socket. ③Please contact customer service directly for repair.


Troubleshooting

If you encounter problems while using this product, please refer to the following tips and possible solutions, if the product is still faulty, please send the product to the original purchase or dealer for inspection and repair.


abnormal condition	possible cause	handling method
Sneezing and gurgling during operation	1. The sound from the product during normal working. 2. The sound of friction between the ball and the cloth cover.	No processing required.
The noise became unusually loud during massaging	Please check if the machine is used last a long time.	Please turn off the power immediately and keep the machine at rest 1 hour up.
During massaging, the machine suddenly stopped	The product has completed the 15-minute regular massage program and automatically close the machine.	Please press power button again to continue massaging.
	The product is equipped with temperature overheat protection.	the machine is used last a long time, will be overheated state, please keep the machine at rest 1 hour up.
The product does not work after the power is urned on	The product is equipped with temperature overheat protection.	When machine is at overheated state, please keep it at rest 1 hour up.
	The power cable plug or DC plug is not properly inserted.	Please recheck that the plug is fully plugged in.

Product Parts

noumenon

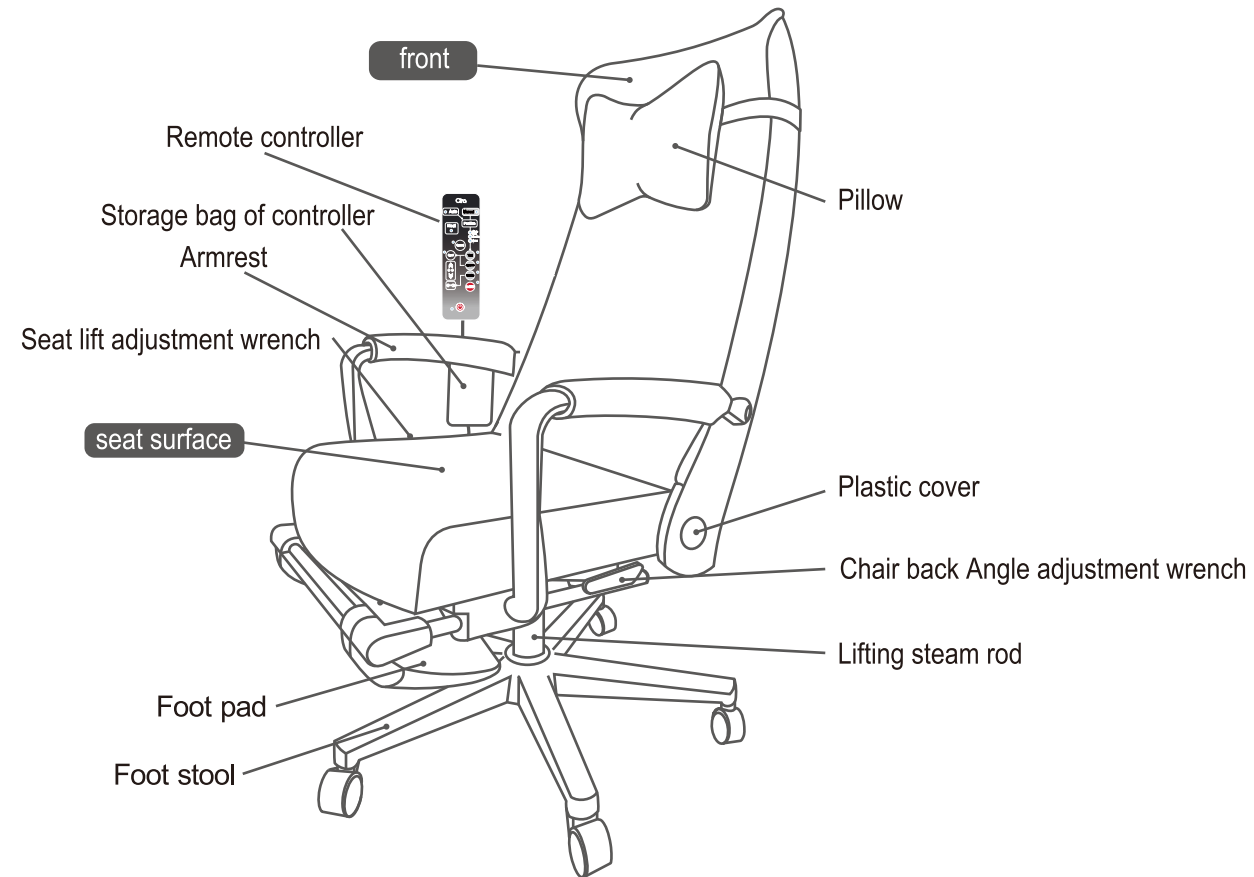


●Back

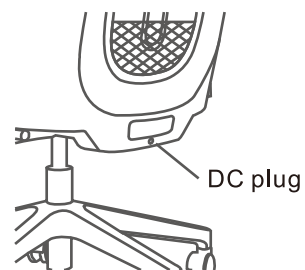

Accessories




● AC POWER CORD

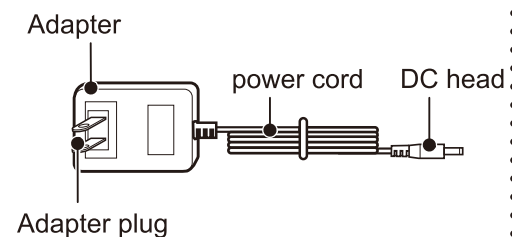



Warning Please use the adaptor in right one.

4 The usage of foot pads

- ① Pull out the pad expansion rod in the direction shown, then turn the pedal up and the pedal forward.

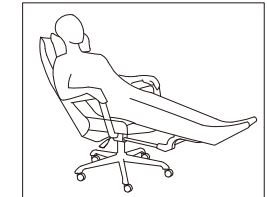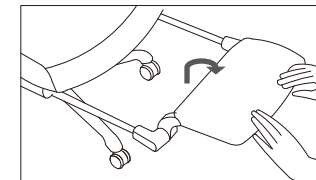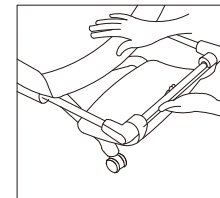

- ② When the foot mat is stored, please turn the pedal upward, return to the original position, and then push the foot mat telescopic rod into the seat for storage according to the direction shown.

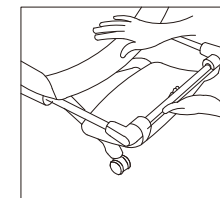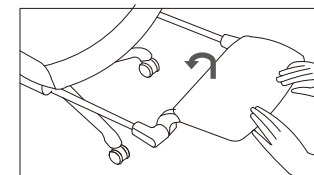

1 Massage mode


Auto mode (approx. 15 minutes)

- ① When the power light is on, press the auto mode, the auto and whole body's indication lights is on, then start the auto mode.
- ② Press the area button, the mode change to shoulder massaging, and the indication light is on. Press this button again, the mode change to waist massaging, the indication light is on.

Massage area and lights	
The whole body	Massage area from Shoulder to waist
Shoulders	Shoulder massage
Waist	Waist massagie

Manual mode (approx. 15 minutes) Thai massage

- ① Press this button,change to the manual mode, the indication light is on, then press this button again, mode will be Thai massage, the indication light up, and start the Thai massaging.
- ② Pressing the SPOT button, the shoulder indication lights up; Press this button again, the waist indication lights up.
- ③ When the Thai indication light is on, press the SPOT button, the indication lights up, the massage head stops travel up and down, then do the spot massaging.
- ④ When the Thai indication light is on, press the massage head adjustment button, and the massage head can travel up and down.
 - 「▲」 Press and hold the UP button, the massage head moving up, then release the button,the massage head will be performed at the selected location.
 - 「▼」 Press and hold the DOWN button, the massage head moving down, then releases the button, the massage head will be performed in the selected position.

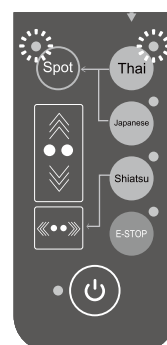


Press the speed button to adjust the speed of the massage ball, three levels: slow, medium and fast.

Manual mode (approx. 15 minutes) Japanese massage


- ① In the state of manual indication light up, press the Japanese button, the indication light up, start the Japanese massaging.
- ② After pressing the SPOT button, the shoulder indication light up. Press the SPOT button again, and the waist indication light up
- ③ When the Japanese light up, press the SPOT button, the indication lights up, the massage head start the SPOT massaging.
- ④ When the Japanese indication light up, press and hold the massage head adjustment button, and the massage head can travel up and down.
 - 「▲」 Press and hold the UP button, the massage head moving up, then release the button,the massage head will be performed at the selected location.
 - 「▼」 Press and hold the DOWN button, the massage head moving down, then releases the button, the massage head will be performed in the selected position.

Press the speed button to adjust the speed of the massage ball, three levels: slow, medium and fast.

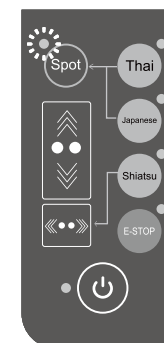

Manual mode (approx. 15 minutes) Shiatsu massage

- ① In the state of manual indication light up, press the shiatsu button, shiatsu indication light, then start the shiatsu massaging.
- ② After pressing the SPOT button, the shoulder indication light up. Press the SPOT button again, the waist indication light up.
- ③ When the acupressure light up, press the width button, and the angle of the massage head will be changing.

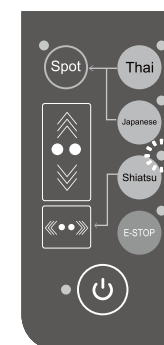

- 2 Press the heating button, the heating indication light up, and the massage head light will be red.


- 3 Automatic timing, the product will be turned off automatically after 15 minutes, please unplug the switch power.

Automatic mode, if needs to be stopped midway (in case of feeling abnormal or special situation)


Using time
This product is automatically timed for 15 minutes, please do not use continuously. Continuous use of the same area tends to cause excessive muscle stimulation.

Chair Usage


- 1 The seat back angle can be adjusted according to personal preference.
- ① The person leans the back of chair, pulls the wrench on the left side with his left hand.

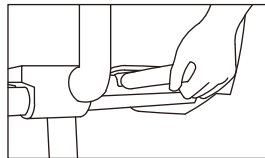



- ② Chair back angle adjustment range from 106 to 137.
- ③ When the wrench is released with the left hand, the back of chair is fixed.

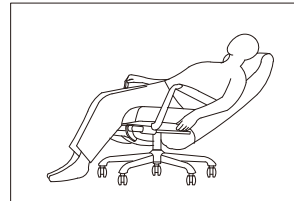

 - 2 Lift of seat
Use the right hand to operate the wrench under the seat to adjust the lift of the seat surface

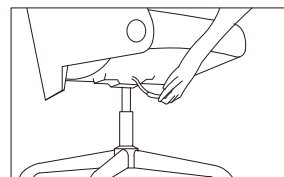

- 3 Usage method of the pillow

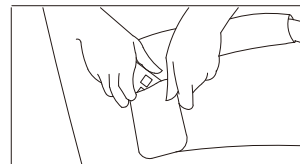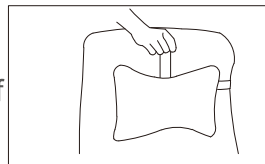 

Controller Operation

Auto mode

When selecting Automatic mode, press this button

Heat

Press the button to start the heating function

Speed

In manual mode, choose Thai or Japanese massage, then press the speed button, you can adjust the speed at 3 levels (slow, medium, fast)

Spot

For Thai and Japanese modes, press this button to do the SPOT massaging.

Massage head adjustment button

When SPOT massaging, press and hold this button to move the massage head up and down

Width

In shiatsu mode, press this button to adjust the width of the massage head.

Power light

After the DC jack is plugged into the adapter, the power light up and the product into standby state.

Manual mode

You can manually select the mode as your requested.

Position

Select massage area in automatic or manual mode

Thai massage

A massage in which the center of the body is slowly pushed outward

Japanese massage

Simulated hand massage

Shiatsu massage


Massage gently the muscles and bones

STOP

Press this button to stop massage directly in any mode.

Power

Press this button, stop massage, massage head up to reset

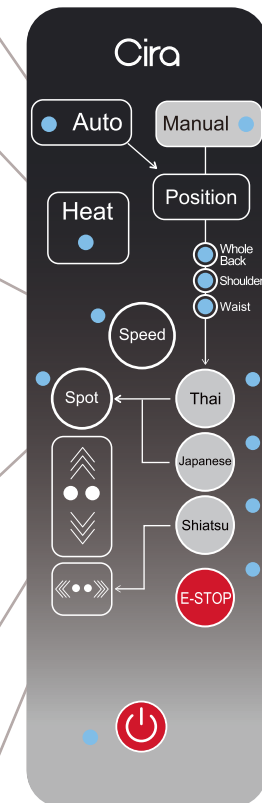

Specification

Product name	Cira office massage chair
Adaptor	: DC 12V 3A
Rated power	: 29W
Timer	: 15 minutes
Size	: Approx. Long 74 ~ 142cm X wide 64cm X high 95 ~ 112cm The seat height is 41 ~ 51cm
Product Weight	: About 18.8KG
Cord length	: 1.8M
Internal structure:	Iron frame, sponge, cloth cover,massage body

Cautions

Warning



Please use the enclosed power adapter, do not use other products or your own adapter.



Do not let children use this chair, and keep children away from it.



Please be sure that whether the cloth cover is nice before use. Once there is damage, please stop using immediately, unplug the power and contact customer service for maintenance.



Do not stand or jump on the chair and do any unsafe manner.



Do not turn the chair while the power cord is plugged in, otherwise the wire plug will break (once the massage stops, the power cord must be unplugged from the chair)



Never disassemble the product to repair it by yourself and never open the product zipper.



Do not use this chair when your body is in a watery state.



Make sure the power plug is in place.



Do not plug or unplug the power by wet hands.

Product Maintenance

Attention



When cleaning, be sure to unplug the power.



If you do not use it for a long time, please confirm whether the massage body can operate normally before use.



If you do not use it for a long time, be sure to unplug the power.



When moving this product, please do not pull hardy.



Please do not use alcohol or other corrosive cleaning agents to clean this machine.